

**OPTIMUS®**

Cat. No. 33-3016

## Karaoke Echo Microphone

Your Optimus Karaoke Echo Microphone is made especially for use with karaoke machines. This high-quality microphone has an adjustable echo level control, reduces pickup of unwanted sounds, and allows a large distance between the microphone and the sound source.

### INSTALLING THE BATTERY

The microphone uses one AA battery (not supplied). For the longest battery life, we recommend an alkaline battery, such as RadioShack Cat. No. 23-557.

1. Set **ON/OFF** to **OFF**.
2. Hold the middle of the microphone, then turn the lower part of the microphone counterclockwise to remove it.
3. Install the battery as indicated by the polarity symbols (+ and -) marked inside the battery compartment.
4. Replace the lower part of the microphone by turning it clockwise.

#### Notes:

- If you do not plan to use the microphone for a week or more, remove the battery.
- Replace the battery when the volume level becomes too low for normal use, or when the power indicator dims or does not light.

### USING THE MICROPHONE

**Note:** If your karaoke machine has an echo level control, set this control to its lowest level.

1. Insert the microphone plug into the microphone jack on your karaoke machine.
2. Set **ON/OFF** to **ON** to turn on the microphone. The power indicator lights.
3. Adjust **ECHO LEVEL** for the echo effect you desire.
4. Set **ON/OFF** to **OFF** to turn off the microphone. The power indicator turns off.

© 1996 Tandy Corporation.

All Rights Reserved.

Optimus is a registered trademark used by Tandy Corporation.  
RadioShack is a trademark used by Tandy Corporation.

## MAINTENANCE

To enjoy your Optimus Karaoke Echo Microphone for a long time:

- Treat the microphone gently. Don't drop it.
- Keep it away from extreme temperatures.
- Keep it out of dirt and water.
- Don't take it apart, except to install or remove a battery. If something is wrong with the microphone, take it to your local RadioShack store for help.

## SPECIFICATIONS

 
Type .....	Karaoke Echo Microphone
Directionality .....	Uni-Directional
Echo Method .....	Bucket Brigade Device (BBD) Pure Electronic Echo
Frequency Echo .....	100–15,000 Hz
Output Impedance .....	600 Ohms
Sensitivity .....	–60 dBm (100 dB SPL at 1 kHz)
Power Consumption .....	40 mA
Power Source .....	DC 1.5V, One AA Battery
Battery Life .....	About 18 Hours
Cord Length .....	15 Feet (4.5 Meters)
Dimensions (Diameter/Length) .....	2 <sup>1</sup> / <sub>8</sub> × 8 <sup>15</sup> / <sub>16</sub> Inches (54 × 227 mm)
Weight (Including Battery) .....	9.5 oz (270 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

**RadioShack**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**

2A6



Printed in Hong Kong

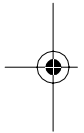

**RadioShack**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**

2A6

  Printed in Hong Kong



#### RadioShack Limited Warranty

This product is warranted against defects for 90 days from date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your RadioShack sales slip** as proof of purchase date to any RadioShack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage.

EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

*We Service What We Sell*

10/95

**RadioShack**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**

2A6

Printed in Hong Kong